LF-M010A Motorcycle Alarm Instruction Manual

Arm: **Disarm:** **Bike Location:** **Remote Start:**

1. Arm: When the engine cut off, the key lock turned to ACC OFF, press the button on the remote transmitter once, the system is in the status of arming sound& light, if it is triggered, the siren would beep, the flash light would gleam; if it is triggered again in 5 seconds, the siren would chirp, the flash lights would gleam, at the moment, the engine is locked up and can't be started.

2. Silent/Mute Arm:

When the engine cut off, the key lock turned to ACC OFF, in 3 seconds, press the button on the remote transmitter twice continuously, the siren would beep once and the flash lights would gleam twice, the alarm system is in Arm mode; when it is triggered, the flash light would gleam 5 times; In 5 seconds, if the system is triggered again, the flash light would gleam 15 times and the engine is locked up and can not be started.

3.Warning:

In arm, if somebody puts a key into the key lock, it would be triggered and the siren would chirp, the flash lights would gleam, at the moment, the engine is locked up and can't be started till press the button on the transmitter to disarm it.

4. Bike locating:

When the bike parked, you can find the bike very easily in a large park even in the dark by pressing the button on the remote transmitter once, when the siren would chirp 8 times and the flash lights would gleam 8 times continuously.

5. Overtaking warning:

When the bike is being driven and the driver is going to overtake the others vehicles on the way, he can press the on the remote transmitter once, the siren would beep 8 seconds urgently, the flash lights would gleam at the same time to warn the others vehicles you going to overtake. Press the button on the remote transmitter once to stop the warning.Please kindly note that siren chirping is banned in somewhere.

6.Anti-hijacking:

When you and your bike are hijacked on the way, within 100 meters range, you can press the button to cut off the engine which can't be started again within 3 seconds, the alarm system would chirp urgently, while the flash lights would gleam continuously and simultaneously. At the moment, the engine is locked up and can't be started, in this way, it can horrify the robber, on the other hand, the bike user may find others help avoid losing the vehicle.

8.Remote start

Within 3 seconds press the button 2 times, the engine will be automatically start.

8. Remote engine cut-off:

When the bike is moving, press the button on the remote transmitter once to cut off the engine, in 2 seconds, it is in arm mode. In order to assure your safety, Don't press the button on the remote transmitter when the bike is moving as it is very dangerous.

9. In arm reminding:

When the engine cut off, the key is taken off, If the alarm is not made in arm after 3 seconds, the siren would chirp 3 times to remind the bike driver.

10. Help calling:

Any time, press the button twice within 3 seconds continuously, the siren would chirp for 20 seconds loudly, the flash lights would gleams continuously and simultaneously，the engine is locked up and can't be started.

11. Code learning/ code deleting automatically:

In disarm mode, put the bike key into the key lock and turn it from ACC-OFF to ACC-ON for 8 times and stop on the ACC-ON position, when the flash lights would light un-continuously, press any button on the transmitter once, the siren would chirp once, the flash light is off, it is successful to learn the code. (By the same way, the other remote transmitter can be learnt code. Max. 4)

12. Power off memory:

A:If the system is in arm, when power off and later on again, the alarm system can remember and remain the arm status before power off after 2 seconds.
B:In arm or anti-hijacking, If the system is powered off, when the power is on again, the alarm system can come back the status before anti-hijacking after 2 seconds.

Note:

★ To avoid power loss, the transmitter can't be watered, high dropped and should be away from high temperature

★ When the remote control distance is getting nearer and nearer even the LED is off, please open the transmitter case and change the A23 battery.

★ After you parked down the bike, please don't forget to press the button to arm
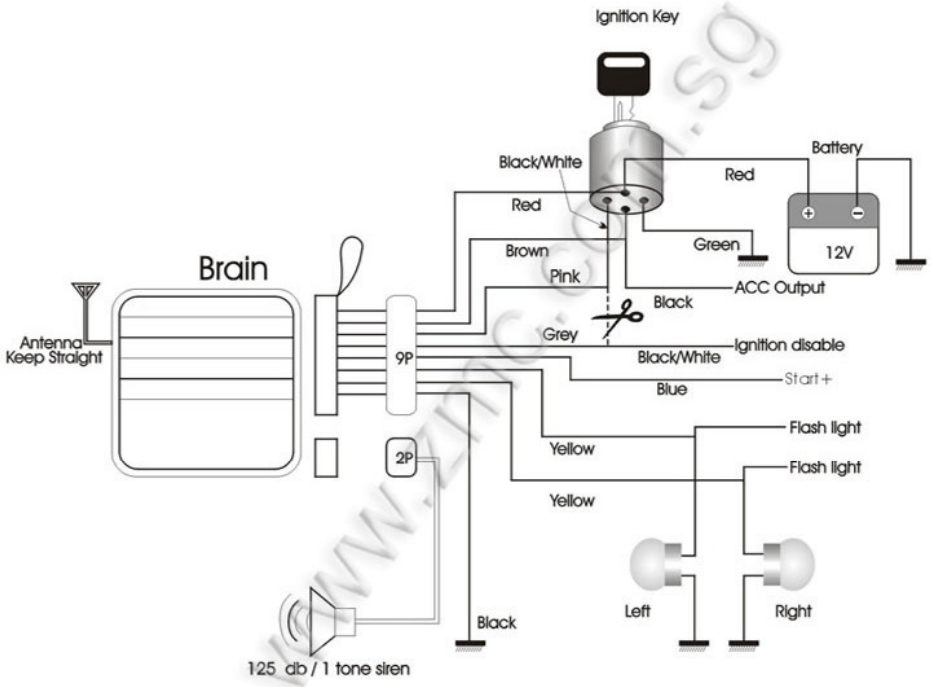
★ Before you start the bike, please don't forget to press the button to disarm